Item	Wire Color	Polarity	Wire Location
12 Volts	white (50A)	+	ignition harness
Ground	(chassis ground)		
tarter	black/white	+	ignition harness
gnition	black/yellow	+	ignition harness
Accessory	yellow	+	ignition harness
Second Accessory	white/black	+	ignition harness
(eysense	blue/white	-	key switch
MMO Data	red	data	Immobilizer Module on key switch
MMO Synchro	blue	data	Immobilizer Module on key switch
Ooor Lock Data	brown	data	driver side fuse box, green 18 pin plug, pin 14
ower Lock	black/orange (passenger door lock switch)	-	passenger side fuse box, green 20 pin plug
Power Unlock	blue/orange (passenger door lock switch)	-	passenger side fuse box, green 20 pin plug
ock Motor	white/red	5 wire	driver side fuse box
Priver Unlock Motor	yellow (EX) or lt. green/red (LX)	5 wire	driver side fuse box
assenger Unlock Motor	lt. green/red	5 wire	passenger side fuse box, green 20 pin plug
actory Alarm Arm	black/blue (passenger door key lock) (EX models)	-	passenger side fuse box, green 20 pin plug
actory Alarm Disarm	orange (passenger door key unlock) (EX models)	-	passenger side fuse box, green 20 pin plug
Disarm No Unlock	blue (driver door key unlock) (EX models)	-	drivers power window switch
runk Alarm Shunt	green/orange (trunk key cylinder) (EX models)	-	drivers kick panel
arking Lights	red/black	+	driver side fuse box, green 10 pin plug
arking Lights -	red/yellow (EX models only)	-	steering column
leadlight	blue/red	-	steering column
Reverse Light	green/black	+	driver side fuse box
eft Front Door Trigger	green/orange	-	driver side fuse box, green 10 pin plug
light Front Door Trigger	green	-	passenger side fuse box, green 20 pin plug
eft Rear Door Trigger	green/yellow	-	driver side fuse box, green 10 pin plug
Right Rear Door Trigger	green/white	-	passenger side fuse box, green 20 pin plug
Dome Light	black/white	-	passenger side fuse box, green 4 pin plug
runk/Hatch Pin	orange	-	drivers kick panel
lood Pin	yellow/red or yellow	-	hood pin switch
runk/Hatch Release	use trunk release motor		
runk Release Motor	white/red or blue/green	5 wire	drivers kick panel
achometer	blue	ac	tach test connector
lutch Pedal	blue/white	interrupt	clutch switch
Rear Defroster	brown/yellow	- latched	rear defogger switch
Speed Sense	blue/white	ac	ECM
Brake Wire	white/black	+	brake pedal switch
Parking Brake	green/red (USA), green/white (Canada)	_	parking brake switch


2002 Honda Accord - North America				
Item	Wire Color	Polarity	Wire Location	
Horn Trigger	lt. green/blue	-	steering column	
Left Front Window (Up/Down)	red/blue - red/yellow	A	drivers door switch	
Right Front Window (Up/Down)	blue/yellow - blue/white	A	RF window switch	
Left Rear Window (Up/Down)	red/yellow - red/blue	A	LR window switch	
Right Rear Window (Up/Down)	red/yellow - red/blue	A	RR window switch	
Radio 12V	white/green	+	radio harness	
Radio Ground	black	-	radio harness	
Radio Ignition	white/red	+	radio harness	
Radio Illumination	red/black	+	radio harness	
Left Front Speaker (+/-)	blue/green - gray/black	+,-	radio harness	
Right Front Speaker (+/-)	red/green - brown/black	+,-	radio harness	
Left Rear Speaker (+/-)	blue/yellow - gray/white	+,-	radio harness	
Right Rear Speaker (+/-)	red/yellow - brown/white	+,-	radio harness	

Wiring Photo and Notes: Starter

There is currently no photo for this item.


If doing starter kill, must interrupt the wire between the keyswitch and the fusebox, not between the fusebox and the starter, to keep the check engine light from coming on.

Wiring Photo and Notes: IMMO Data

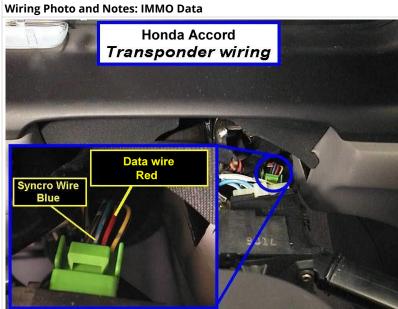

There are no notes for this wire.



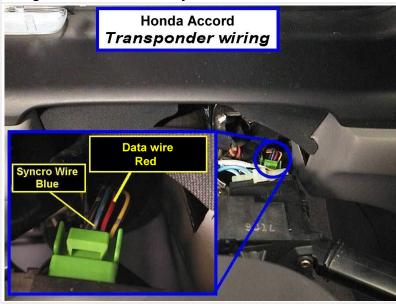

There are no notes for this wire.


Wiring Photo and Notes: Power Lock

Wiring Photo and Notes: Power Lock



On LX models, can also use black/white (-) in a gray 2 or 3 pin plug by the front of the driver side fuse box.


Wiring Photo and Notes: Power Unlock

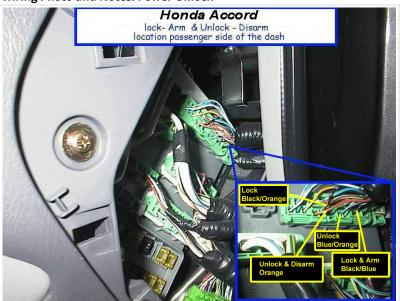

On LX models, can also use green/red (-) in a gray 2 or 3 pin plug by the front of the driver side fuse box.


Wiring Photo and Notes: Factory Alarm Arm

Wiring Photo and Notes: Factory Alarm Arm

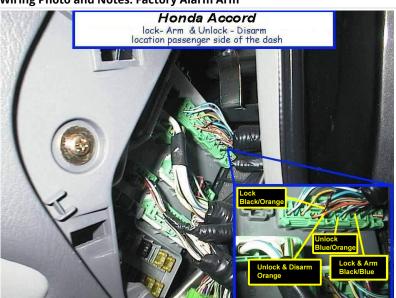

The LX models arm only with the factory transmitter.


Wiring Photo and Notes: Factory Alarm Disarm

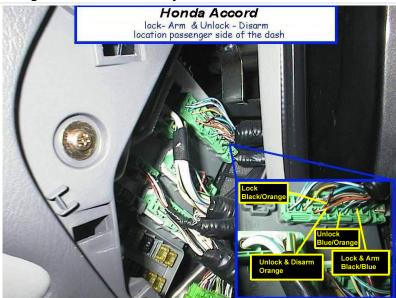

The LX models disarm only with the factory transmitter.


Wiring Photo and Notes: Parking Lights

Wiring Photo and Notes: Parking Lights

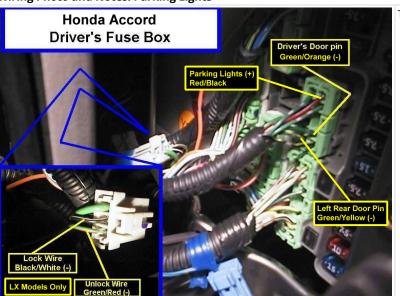

There are no notes for this wire.


Wiring Photo and Notes: Left Front Door Trigger

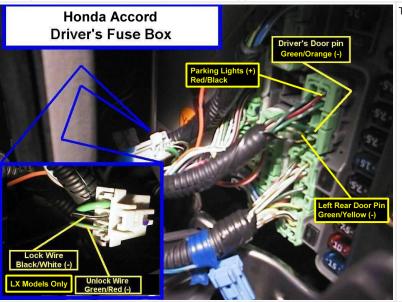

There are no notes for this wire.

Wiring Photo and Notes: Left Rear Door Trigger

Wiring Photo and Notes: Left Rear Door Trigger

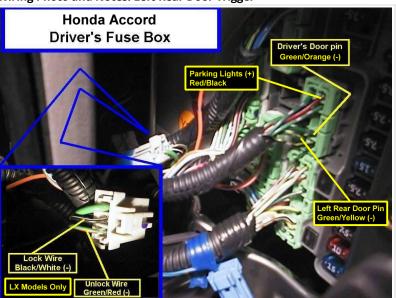

There are no notes for this wire.

Wiring Photo and Notes: Trunk/Hatch Pin



Above the hood release in a gray 18 pin connector. On the DX & LX models, also found in a 2 pin connector behind the drivers fuse box.

Wiring Photo and Notes: Hood Pin

Wiring Photo and Notes: Hood Pin




On the EX models it is in a green plug next to the passenger side fuse box. On the LX models it is at the keyless/security unit, if equipped, which is attached to the driver side underdash panel.

Wiring Photo and Notes: Tachometer



The tach test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6 cylinder motor. The tach test connector is a white 2 pin connector, and may be covered by a black rubber boot.

Wiring Photo and Notes: Speed Sense

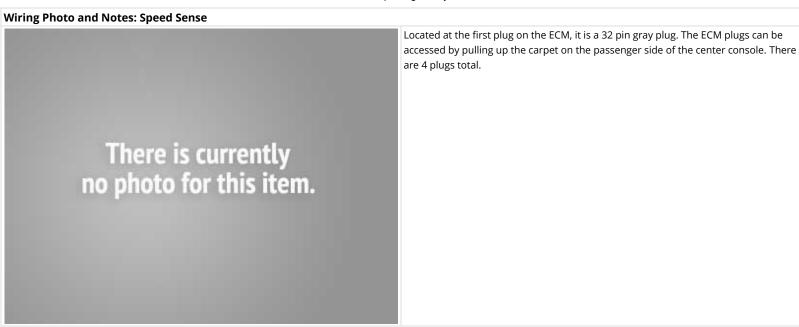

© 2018 Directed. All rights reserved. –

DirectWire and its vehicle information are for the sole use of authorized Directed personnel and it's participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.