



Connector Terminal Views

229. Gauge Assembly

- Behind gauge assembly
- On dashboard wire harness A (left branch)

'01-'02; '03-'05: GX



Connector A


- Green

- 1 —
- 2 WHT/GRN (Communication line)
- 3 YEL/BLK (Fuel gauge)
- 4 —
- 5 —
- 6 —
- 7 —
- 8 —
- 9 —
- 10 Canada:
 - '01-'02: PNK
 - '03-'05: RED/WHT (Gauges and indicators)
- 11 —
- 12 BLU/WHT (Circuit E93)
- 13 BLU (Gauges and indicators)
- 14 except DX: BLU/YEL (Cruise control)
- 15 —
- 16 BLK (G501)
- 17 YEL (Fuse 10 – Under-dash)
- 18 WHT/RED (Fuse 9 – Under-hood)
- 19 —
- 20 Canada: WHT/BLU (Headlights)
- 21 PNK/BLU (SRS)
- 22 —

Connector B

- Light Blue

- 1 RED/BLU
 - '01-'03 USA: (Headlights)
 - '04-'05 USA: (Headlights)
 - '01-'03 Canada: (Headlights)
 - '04-'05 Canada: (Headlights)
- 2 USA; '03 GX CVT – Canada: RED/YEL
 - '01-'03 USA; '03 GX Canada: (Fuse 15 – Under-hood)
 - '04-'05 USA: (Fuse 15 – Under-hood)
 - '04-'05 GX – Canada: RED/GRN (Headlights)
- 3 A/T: BLK/RED
 - '01-'02 DX, LX, EX A/T: (A/T gear position indicator)
 - '01-'02 HX; 01-'05 GX: (A/T gear position indicator)
- 4 '03-'05 A/T: GRN/BLK (Circuit M34)
- 5 A/T: BLU/BLK (Circuit M35)
- 6 —
- 7 —
- 8 —
- 9 —
- 10 WHT/RED (Fuse 9 – Under-hood)
- 11 A/T: WHT (Circuit M34)
- 12 GRN/YEL (Turn signal and hazard warning lights)
- 13 GRN/RED (Turn signal and hazard warning lights)
- 14 PNK (SRS)
- 15 LX, EX: BLU/RED (ABS)
- 16 RED/BLK (Circuit 11)
- 17 RED (Circuit 12)
- 18 BLK (G501)
- 19 —
- 20 YEL/RED (Low oil pressure indicator)
- 21 GRN/ORN (MIL circuit)
- 22 BLU/ORN (Immobilizer system)

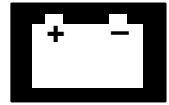

Connector Terminal Views

229. Gauge Assembly

- Behind gauge assembly
- On dashboard wire harness A (left branch)

'03-'05: DX



Connector A

 
– Green

- 1 —
- 2 WHT/GRN (Communication line)
- 3 YEL/BLK (Fuel gauge)
- 4 —
- 5 —
- 6 —
- 7 —
- 8 —
- 9 —
- 10 Canada: RED/WHT (Gauges and indicators)
- 11 —
- 12 BLU/WHT (Circuit E93)
- 13 BLU (Gauges and indicators)
- 14 —
- 15 —
- 16 BLK (G501)
- 17 YEL (Fuse 10 – Under-dash)
- 18 WHT/RED (Fuse 9 – Under-hood)
- 19 —
- 20 Canada: WHT/BLU (Headlights)
- 21 PNK/BLU (SRS)
- 22 —

Connector B

– Light Blue

- 1 RED/BLU
 - '03 USA: (Headlights)
 - '04-'05 USA: (Headlights)
 - '03 Canada: (Headlights)
 - '04-'05 Canada: (Headlights)
- 2 USA; '03 Canada: RED/YEL
 - '03: (Fuse 15 – Under-hood)
 - '04-'05 USA: (Fuse 15 – Under-hood)
 - '04-'05 Canada: RED/GRN (Headlights)
- 3 A/T: BLK/RED (A/T gear position indicator)
- 4 A/T: GRN/BLK (Circuit M34)
- 5 A/T: BLU/BLK (Circuit M35)
- 6 —
- 7 —
- 8 —
- 9 —
- 10 WHT/RED (Fuse 9 – Under-hood)
- 11 A/T: WHT (Circuit M34)
- 12 GRN/YEL (Turn signal and hazard warning lights)
- 13 GRN/RED (Turn signal and hazard warning lights)
- 14 PNK (SRS)
- 15 —
- 16 RED/BLK (Circuit 11)
- 17 RED (Circuit 12)
- 18 BLK (G501)
- 19 —
- 20 YEL/RED (Low oil pressure indicator)
- 21 GRN/ORN (MIL circuit)
- 22 BLU/ORN (Immobilizer system)



Connector Terminal Views

229. Gauge Assembly

- Behind gauge assembly
- On dashboard wire harness A (left branch)

'03-'05: HX, LX, EX



Connector A

– Green

- 1 Canada: RED/WHT (Gauges and indicators)
- 2 —
- 3 BLU (Gauges and indicators)
- 4 BLU/WHT (Circuit E93)
- 5 WHT/GRN (Communication line)
- 6 BLU/ORN (Immobilizer system)
- 7 —
- 8 PNK/BLU (SRS)
- 9 PNK (SRS)
- 10 —
- 11 BLK (G501)
- 12 —
- 13 —
- 14 RED/BLK (Circuit 11)
- 15 YEL (Fuse 10 – Under-hood)
- 16 WHT/RED (Fuse 9 – Under-hood)
- 17 —
- 18 —
- 19 LX, EX: BLU/RED (ABS)
- 20 Canada: WHT/BLU (Headlights)
- 21 BLU/YEL (Cruise control)
- 22 GRN/YEL (Turn signal and hazard warning lights)

Connector B

– Light Blue

- 1 —
- 2 —
- 3 GRN/ORN (MIL Circuit)
- 4 YEL/RED (Low oil pressure indicator)
- 5 —
- 6 WHT (Circuit M34)
- 7 BLU/BLK (Circuit M35)
- 8 GRN/RED (Turn signal and hazard warning lights)
- 9 RED/BLU
 - '03 USA: (Headlights)
 - '04-'05 USA: (Headlights)
 - '03 Canada: (Headlights)
 - '04-'05 Canada: (Headlights)
- 10 USA; '03 Canada: RED/YEL '03: (Fuse 15 – Under-hood)
'04-'05 USA: (Fuse 15 – Under-hood)
'04-'05 Canada: RED/GRN (Headlights)
- 11 BLK (G501)
- 12 RED (Circuit 12)
- 13 YEL/BLK (Fuel gauge)
- 14 —
- 15 —
- 16 —
- 17 BLK/RED
 - LX, EX A/T: (A/T gear position indicator)
 - HX CVT: (A/T gear position indicator)
 - M/T: (Not used)
- 18 GRN/BLK
 - A/T: (Circuit M34)
 - M/T: (Not used)
- 19 —
- 20 —
- 21 —
- 22 —