


## Turn Signal, Headlights, Fog lights

### Turn Signal, Headlights, and Fog lights

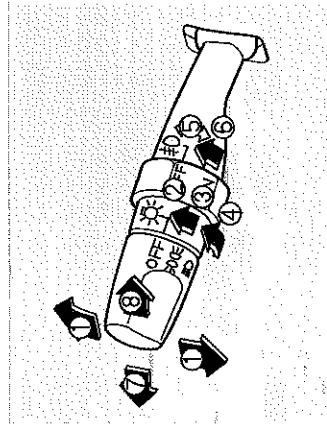

1. Turn Signal
2. Off
3. Parking and interior lights
4. Headlights on
5. Fog lights off
6. Fog lights on
7. High beams
8. Flash high beams

**Turn Signal** — Push down on the left lever to signal a left turn and up to signal a right turn. To signal a lane change, push lightly on the lever and hold it. The lever will return to center when you release it or complete a turn.

**Headlights On** — Turning the switch to the “ $\text{D}$ ” position turns on the parking lights, taillights, instrument panel lights, side-marker lights, and rear license plate lights. Turning the switch to the “ $\text{H}$ ” position turns on the headlights. If you leave the lights on with the key removed from the ignition switch, you will hear a reminder tone when you open the driver’s door.

**Fog lights** — Turning the switch on the left lever controls to the “ $\text{F}$ ” position.

**High Beams** — Pull the lever back until you hear a click to turn on the high beams. The blue high beam indicator will come on (see page 57 ). Pull the lever back again to low beams.

To flash the high beams, pull the lever back lightly, then release it. The high beams will stay on as long as you hold the lever back.

### Daytime Running Lights

With the headlight switch off, the high beam headlights come on with reduced brightness when you turn the ignition switch to ON (II) and release the parking brake. They remain on until you turn the ignition switch off, even if you set the parking brake.

The headlights revert to normal operation when you turn them on with the switch.