


# Fuse/Relay Boxes

## - Under-dash Fuse/Relay Box

### Fuse-to-Components Index

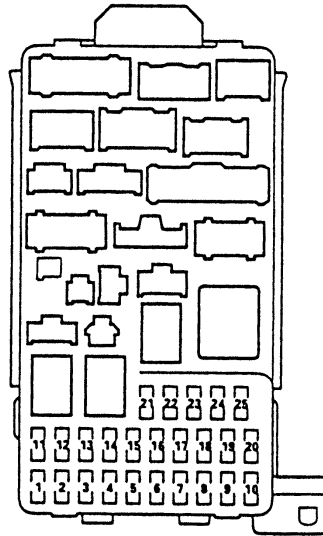


Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1	IG COIL	15A	10-5	Ignition coils
2	LAF HEATER	20A	10-5	A/F sensor relay (HX; '04-'05: DX, LX, EX)
3	DAY LIGHT	(10A)	10-5	DRL control unit (Canada), Multiplex control unit
4	ALTERNATOR	10A	10-6	A/F sensor relay (HX; '04-'05: DX, LX, EX), Alternator, Cruise control unit, ELD unit (USA), EVAP bypass solenoid valve, EVAP canister purge valve (except GX), EVAP canister vent shut valve (except GX), Primary and secondary HO2S, VSS
5	—	—	—	Not used
6	P/W RELAY	(7.5A)	10-7	Moonroof open and close relays (EX), Power window relay
7	SUNROOF	(20A)	10-8	Moonroof open and close relays (EX)
8	ACC RADIO	7.5A	10-8	Audio unit, Multiplex control unit, CarLink interface box (CarLink)
9	RR WIPER SIDE SRS (HX)	(10A)	10-8	OPDS unit
10	METER	7.5A	10-8	A/T reverse relay, Back-up light switch (M/T), CarLink interface box (CarLink), Gauge assembly, Keyless receiver unit (EX; '04-'05: DX, LX), Multiplex control unit, Security control unit, Shift lock solenoid (A/T)
11	ABS	(7.5A)	10-9	ABS modulator-control unit (IG2)
12	DAY LIGHT	(7.5A)	10-9	DRL control unit (Canada)
13	SRS	10A	10-9	SRS unit
14	R/C MIRROR	10A	10-9	A/C compressor clutch relay, A/C condenser fan relay, Blower motor relay, Heater control unit-panel, Power mirror switch (except DX), Radiator fan relay, Recirculation control motor, Rear window defogger relay
15	OPTION FUSE	2A	10-5	Security control unit (Optional)
15	SECURITY (HX)	10A (HX)	—	Not used



# Fuse/Relay Boxes

## - Under-dash Fuse/Relay Box

### Fuse-to-Components Index

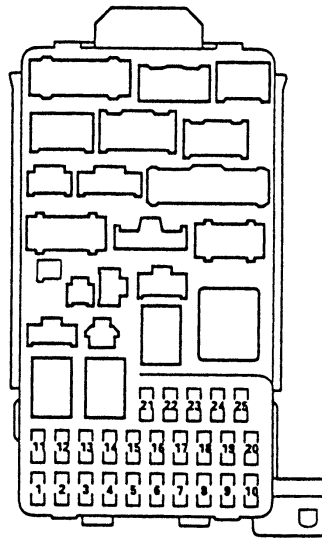

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
16	HEATED SEAT	20A	—	Not used
17	FUEL PUMP	15A	<a href="#">10-10</a>	ECM/PCM, PGM-FI main relay 2, SRS unit
18	ACC CIGAR	15A	<a href="#">10-10</a>	Accessory power socket
19	TURN LIGHT	7.5A	<a href="#">10-10</a>	Hazard warning switch, Turn signal/hazard relay
20	FR WIPER	20A	<a href="#">10-10</a>	Multiplex control unit, Windshield wiper/washer switch, Windshield wiper motor
21	—	—	<a href="#">10-3</a>	Not used
22	AS P/W	20A	<a href="#">10-7</a>	Front passenger's or passenger's power window switch
23	DR P/W	20A	<a href="#">10-8</a>	Power window master switch
24	RR L P/W	20A	<a href="#">10-7</a>	Left rear power window switch
25	RR R P/W	20A	<a href="#">10-7</a>	Right rear power window switch