



Applies To: **ALL** – See index below

January 6, 2004


### Keyless Remote Transmitter Information (Supersedes 97-040, dated May 19, 2003)

This service bulletin gives you information about keyless remote transmitters for Acura vehicles. Each procedure describes transmitter programming (if applicable), transmitter ordering, and transmitter batteries. A transmitter quick reference guide is at the end.

Use this index to find the information for the vehicle you are working on.

Model	Year(s)	With Factory-Installed Keyless Entry System or Security System	With Dealer- Installed Keyless Entry System	With Dealer- Installed Security System
<b>Integra</b>	1990–93	—	—	Page 2
	1994–96	—	—	Page 3
	1997–01	—	—	Page 3
<b>Vigor</b>	1992–94	—	Page 4	—
<b>RSX</b>	2002–04	Page 4	—	—
<b>TSX</b>	2004	Page 5	—	—
<b>2.2/2.3CL</b>	1997–98	Page 5	—	—
<b>3.0/3.2CL</b>	1997–99	Page 5	—	—
	2001	Page 6	—	—
	2002–03	Page 8	—	—
<b>2.5TL</b>	1996–97	—	Page 4	—
	1998	Page 7	—	—
<b>3.2TL</b>	1996–98	Page 7	—	—
	1999–01	Page 7	—	—
	2002–03	Page 8	—	—
<b>TL</b>	2004	Page 8	—	—
<b>Legend</b>	1991–95	—	Page 4	—
<b>3.5RL</b>	1996–01	Page 9	—	—
	2002–04	Page 10	—	—
<b>NSX</b>	1991–03	—	Page 4	—
	2004	Page 4	—	—
<b>SLX</b>	1996	—	Page 10	—
	1997	Page 10	—	—
	1998–99	Page 11	—	—
<b>MDX</b>	2001–04	Page 12	—	—

## 1990–93 Integra with dealer-installed security system

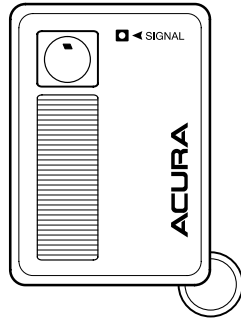


P/N 08E50-SK7-210

### Programming the Transmitter


**NOTE:** The system uses ROM chips that match the transmitter to the security system control unit. When replacing a lost or stolen transmitter, you need to use the three ROM chips (provided with the new transmitter) to match the old transmitter with the new transmitter and the control unit.

1. Remove the rear cover from the old transmitter and the new one.
2. Remove the ROM chip from the old transmitter by sliding its socket holder toward the ROM chip.

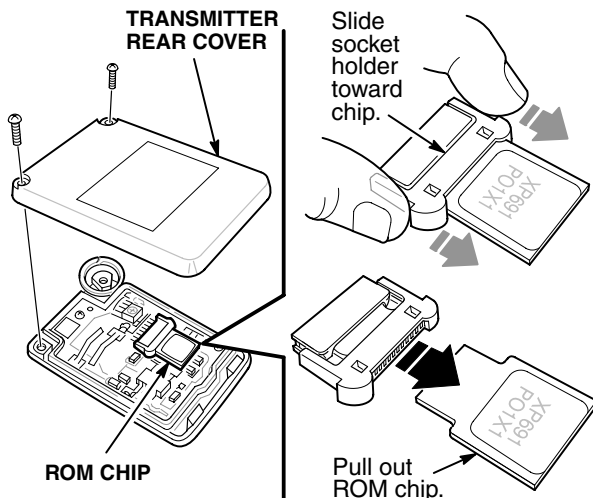

3. Insert a new ROM chip into the socket holder, then slide the socket holder toward the socket to lock the chip in place.
4. Repeat step 3 to install a ROM chip into the new transmitter.
5. Reinstall the rear covers on the transmitters.
6. Remove the security system control unit from under the driver's seat.

7. Open the access cover on the control unit, and replace the ROM chip. (Use the same procedure as in steps 2 and 3.)

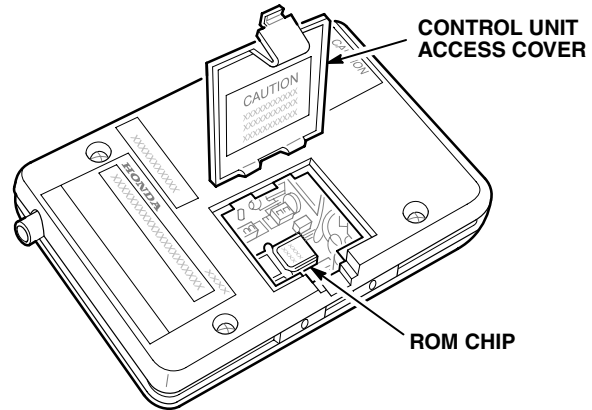

8. Press the reset button next to the ROM chip.
9. Close the access cover, and reinstall the control unit.

If you are replacing a *damaged* transmitter, don't replace the ROM chips in the transmitters and the control unit; just remove the chip from the old transmitter and install it in the new one.

### Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.


If your customer wants to add a third transmitter to the system, you need to order a four ROM chip set directly from Alpine Electronics of America. The Alpine part number for the four ROM chip set is 8319. This ROM chip set *does not* come with a transmitter. Order the additional transmitter from American Honda.

If you have questions about how to order a four ROM chip set, call Alpine's parts department at (800) 421-2284, extension 8885.

### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

## 1994–96 Integra with dealer-installed security system

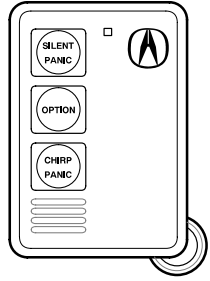

P/N 08E51-ST7-20101

### Programming the Transmitter

#### NOTES:

- The system uses a stacking-type memory that accepts up to four transmitters. If you program a fifth transmitter, the system's memory for the first transmitter is erased.
  - To clear a lost or stolen transmitter from the system's memory, erase all transmitter codes and then reprogram them. Refer to the security system owner's manual.
  - If the valet/disarm button is released before programming is complete, the system will exit the programming mode.
1. Turn the ignition switch to ON (II).
  2. Press and hold the Valet-Disarm button on the dashboard lower cover. (Continue to hold the button during this procedure, or programming will be cancelled.) The LED on the upper steering column cover flashes when the system is in programming mode.
  3. Press the top button on the transmitter. Check that the parking lights flash to confirm that the transmitter's code was accepted.
  4. Press the top button on each of the remaining transmitters. Check that the parking lights flash after each transmitter code is accepted.
  5. Release the Valet-Disarm button to exit the programming mode.

### Ordering a Transmitter


Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

---

## 1997–01 Integra with dealer-installed security system

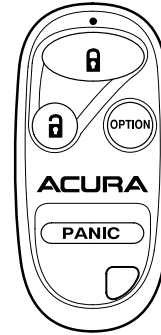

P/N 08E51-ST7-2M2G1

### Programming the Transmitter

#### NOTES:

- The system accepts up to four transmitters.
  - Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
  - You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.
1. Turn the ignition switch to ON (II).
  2. Press the "Lock" or "Unlock" button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
  3. Turn the ignition switch to LOCK (0).
  4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
  5. Turn the ignition switch to ON (II).
  6. Press the "Lock" or "Unlock" button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
  7. Within 10 seconds, press the "Lock" or "Unlock" button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter's code.
  8. Turn the ignition switch to LOCK (0) to exit the programming mode.

### Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.


---

1991–03 NSX with dealer-installed keyless entry system

1991–95 Legend with dealer-installed keyless entry system

1992–94 Vigor with dealer-installed keyless entry system

1996–97 2.5TL with dealer-installed keyless entry system

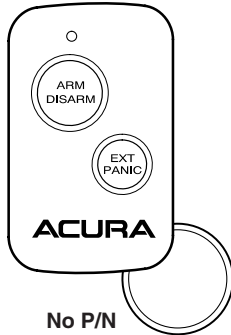

### Programming the Transmitter

This transmitter is not programmable.

### Ordering a Transmitter

Transmitters can be ordered directly from Kenwood USA only by authorized Acura dealers. Send a completed order form (copy it from the Accessory Replacement Parts section of the Dealer Parts Price List) along with a dealer check for \$30.00 (payable to Kenwood U.S.A. Corp.) to this address:

Kenwood Service Corp.  
P.O. Box 22745  
Long Beach, CA 90801-5745

On the order form, you must include the serial number of the keyless control unit or the number from one of the original transmitters.

If you need a transmitter shipped overnight, fill out the order form, then call Kenwood at (800) 852-4690, or fax them at (310) 898-1029 (weekdays from 8:30 A.M. thru 4:00 P.M. Pacific time). You will need to give the information on the order form to the Kenwood representative. The transmitter will be sent to your dealership COD. Additional shipping and handling charges will be applied to the order.

### Batteries for the Transmitter

The battery number is CR1220. Each transmitter uses two batteries.

2002–04 RSX with factory-installed security system

2004 NSX with factory-installed security system



RSX: P/N 72147-S6M-A01  
NSX: P/N 72147-SL0-A01

### Programming the Transmitter

#### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter is erased.
- Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
- You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.

1. Turn the ignition switch to ON (II).
2. Press the “Lock” or “Unlock” button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
3. Turn the ignition switch to LOCK (0).
4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
5. Turn the ignition switch to ON (II).
6. Press the “Lock” or “Unlock” button on the same transmitter, including the one used to enter the programming mode.. Make sure the power door locks cycle to confirm that the system is in programming mode.
7. Within 10 seconds, press the “Lock” or “Unlock” button on each transmitter. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter’s code.
8. Turn the ignition switch to LOCK (0) to exit the programming mode.

### Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

### 2004 TSX with factory-installed security system



P/N 72147-SEC-A01

### Programming the Transmitter

#### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter is erased.
- Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
- You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.

1. Turn the ignition switch to ON (II).
2. Press the "Lock" or "Unlock" button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
3. Turn the ignition switch to LOCK (0).
4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
5. Turn the ignition switch to ON (II).
6. Press the "Lock" or "Unlock" button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
7. Within 10 seconds, press the "Lock" or "Unlock" button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter's code.
8. Turn the ignition switch to LOCK (0) to exit the programming mode.

### Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

### 1997 2.2CL with factory-installed security system

### 1998 2.3CL with factory-installed security system

### 1997-99 3.0CL with factory-installed security system



P/N 72147-SY8-A01

### Programming the Transmitter

#### NOTES:

- The system accepts up to four transmitters.
- Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
- You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.

1. Turn the ignition switch to ON (II).
2. Press the "Lock" or "Unlock" button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
3. Turn the ignition switch to LOCK (0).
4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
5. Turn the ignition switch to ON (II).
6. Press the "Lock" or "Unlock" button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
7. Within 10 seconds, press the "Lock" or "Unlock" button on each transmitter, including the one used to enter the programming mode. (The system will accept up to four transmitters.) Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter's code.
8. Turn the ignition switch to LOCK (0) to exit the programming mode.

## Turning the Audible Chirp On/Off

To turn the audible chirp off and on, press and hold the “Trunk Release” button, then immediately press and hold the “Lock” button. The LED on the transmitter blinks once to indicate on or twice to indicate off.

## Ordering a Transmitter


Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

## Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

---

## 2001 3.2CL with factory-installed security system

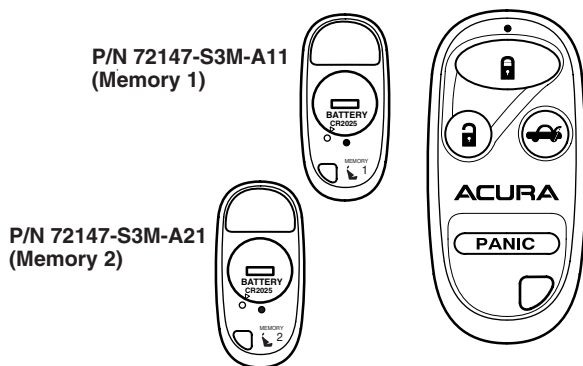

These transmitters are integrated into the Driver's Position Memory System (DPMS). When the doors are unlocked with the remote transmitter, Memory 1 or Memory 2 in the DPMS is activated, depending on the transmitter used. When the driver's door is opened, the seat and mirrors move to the positions stored in the activated memory.

## Programming the Transmitter

### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter will be erased.
- Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
- You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.

1. Turn the ignition switch to ON (II).
2. Press the “Lock” or “Unlock” button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
3. Turn the ignition switch to LOCK (0).
4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
5. Turn the ignition switch to ON (II).
6. Press the “Lock” or “Unlock” button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
7. Within 10 seconds, press the “Lock” or “Unlock” button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter's code.
8. Turn the ignition switch to LOCK (0) to exit the programming mode.

## Linking and Unlinking the Remote Transmitter

To link and unlink the remote transmitter from the DPMS, press and hold the “Unlock” and “Lock” buttons at the same time for about 1 second. The LED on the transmitter blinks once to indicate linked or twice to indicate unlinked.

## Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.


## Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

---

## 1998 2.5TL with factory-installed security system

## 1996–98 3.2TL with factory-installed security system

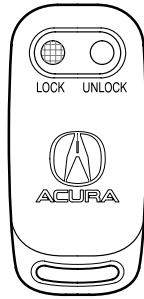

P/N 72147-SZ5-A01

### Programming the Transmitter

#### NOTES:

- The system accepts up to two transmitters.
  - Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all the transmitters once you're in the programming mode.
1. Open the driver's door.
  2. Push up the driver's door master power door lock to the unlock position. Hold it there for the rest of this procedure.
  3. Insert the key in the ignition switch, then remove it. Repeat this four more times within 10 seconds. (Steps 3 and 4 must be completed within 10 seconds, or the system will exit the programming mode.)
  4. Insert the key in the ignition switch. Make sure the power door locks cycle to indicate that the system has entered programming mode.
  5. Press the LOCK or UNLOCK button on the transmitter. Make sure the power door locks (all except the driver's door) cycle to indicate that the transmitter has been accepted.
  6. To program a second transmitter, press its LOCK or UNLOCK button within 10 seconds.
  7. Release the master power door lock switch to exit the programming mode.

### Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.


### Batteries for the Transmitter

The battery number is CR2016. Each transmitter uses two batteries.

---

## 1999–2001 3.2TL with factory-installed security system

1999  
P/N 72147-S0K-A01  
  
2000-01  
P/N 72147-S0K-A02

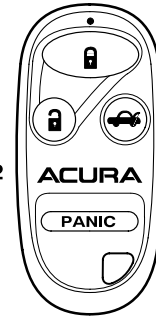

### Programming the Transmitter

#### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter will be erased.
  - Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
  - You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.
1. Turn the ignition switch to ON (II).
  2. Press the "Lock" or "Unlock" button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
  3. Turn the ignition switch to LOCK (0).
  4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
  5. Turn the ignition switch to ON (II).
  6. Press the "Lock" or "Unlock" button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
  7. Within 10 seconds, press the "Lock" or "Unlock" button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter's code.
  8. Turn the ignition switch to LOCK (0) to exit the programming mode.

### Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.


---




## 2002–03 3.2CL with factory-installed security system

## 2002–03 3.2TL with factory-installed security system

P/N 72147-S0K-A12  
(Memory 1)

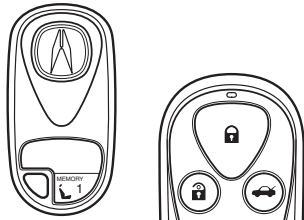

P/N 72147-S0K-A22  
(Memory 2)

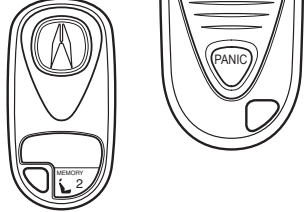

These transmitters are integrated into the Driver's Position Memory System. When the doors are unlocked with the remote transmitter, Memory 1 or Memory 2 in the DPMS is activated, depending on the transmitter used. When the driver's door is opened, the seat and mirrors move to the positions stored in the activated memory.

### Programming the Transmitter

#### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter will be erased.
  - Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all the transmitters once you're in the programming mode.
  - You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.
1. Turn the ignition switch to ON (II).
  2. Press the "Lock" or "Unlock" button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
  3. Turn the ignition switch to LOCK (0).
  4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
  5. Turn the ignition switch to ON (II).
  6. Press the "Lock" or "Unlock" button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
  7. Within 10 seconds, press the "Lock" or "Unlock" button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter's code.

8. Turn the ignition switch to LOCK (0) to exit the programming mode.

### Linking and Unlinking the Remote Transmitter

To link and unlink the remote transmitter from the DPMS, press and hold the "Unlock" and "Lock" buttons at the same time for about 1 second. The LED on the transmitter blinks once to indicate linked or twice to indicate unlinked.

### Ordering a Transmitter


Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

### Batteries for the Transmitter


The battery number is CR2025. Each transmitter uses one battery.

## 2004 TL with factory-installed security system

P/N 72147-SEP-A52  
(Driver 1)

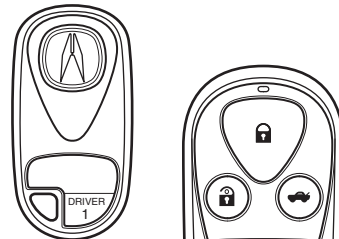

P/N 72147-SEP-A62  
(Driver 2)

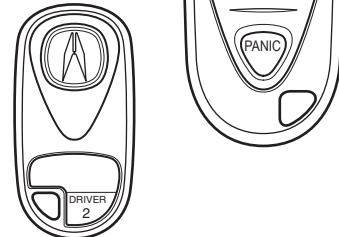

These transmitters are integrated into the Driver's Position Memory System. When the doors are unlocked with the remote transmitter, Memory 1 or Memory 2 in the DPMS is activated, depending on the transmitter used. When the driver's door is opened, the seat and mirrors move to the positions stored in the activated memory.

### Programming the Transmitter

#### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter will be erased.
- Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all the transmitters once you're in the programming mode.
- You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.



1. Turn the ignition switch to ON (II).
2. Press the “Lock” or “Unlock” button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
3. Turn the ignition switch to LOCK (0).
4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
5. Turn the ignition switch to ON (II).
6. Press the “Lock” or “Unlock” button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
7. Within 10 seconds, press the “Lock” or “Unlock” button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter’s code.
8. Turn the ignition switch to LOCK (0) to exit the programming mode.

#### Linking and Unlinking the Remote Transmitter

To link and unlink the remote transmitter from the DPMS, press and hold the “Unlock” and “Lock” buttons at the same time for about 1 second. The LED on the transmitter blinks once to indicate linked or twice to indicate unlinked.

#### Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

#### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

#### 1996–01 3.5RL with factory-installed security system



P/N 72147-SZ3-A02

#### Programming the Transmitter

##### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter will be erased.
- Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
- You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.

1. Turn the ignition switch to ON (II).
2. Press the “Lock” or “Unlock” button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
3. Turn the ignition switch to LOCK (0).
4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
5. Turn the ignition switch to ON (II).
6. Press the “Lock” or “Unlock” button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
7. Within 10 seconds, press the “Lock” or “Unlock” button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter’s code.
8. Turn the ignition switch to LOCK (0) to exit the programming mode.

#### Turning the Audible Chirp On/Off

To turn the audible chirp off and on, press and hold the “Trunk Release” button, then immediately press and hold the “Lock” button. The LED on the transmitter blinks once to indicate on or twice to indicate off.

#### Ordering a Transmitter

Transmitters can be ordered only by authorized Honda dealers. Order them from American Honda using normal parts ordering procedures.

#### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

## 2002–04 3.5RL with factory-installed security system



P/N 72147-SZ3-A91

### Programming the Transmitter

#### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter will be erased.
  - Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
  - You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.
1. Turn the ignition switch to ON (II).
  2. Press the “Lock” or “Unlock” button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
  3. Turn the ignition switch to LOCK (0).
  4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
  5. Turn the ignition switch to ON (II).
  6. Press the “Lock” or “Unlock” button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.

7. Within 10 seconds, press the “Lock” or “Unlock” button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter’s code.
8. Turn the ignition switch to LOCK (0) to exit the programming mode.

### Turning the Audible Chirp On/Off

To turn the audible chirp off and on, press and hold the “Trunk Release” button, then immediately press and hold the “Lock” button. The LED on the transmitter blinks once to indicate on or twice to indicate off.

### Ordering a Transmitter

Transmitters can be ordered only by authorized Honda dealers. Order them from American Honda using normal parts ordering procedures.


### Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

---

## 1996 SLX with dealer-installed keyless system

## 1997 SLX with factory-installed security system

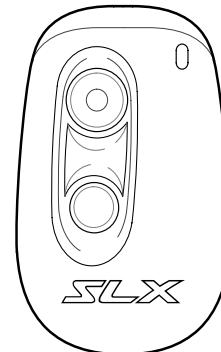


P/N 2-91101-691-0

#### NOTES:

- The system uses a stacking-type memory that accepts up to two transmitters. If you program a third transmitter, the memory for the first transmitter is erased.
- To clear a lost or stolen transmitter from the system’s memory, program a transmitter two times. This will remove the missing transmitter from memory, since only two transmitter codes can be accepted.
- Another way to clear a lost or stolen transmitter is to erase all transmitter codes and then reprogram them. To do this, refer to the security system owner’s manual.

## Programming a Transmitter

1. Remove the driver's side lower dashboard panel.
2. Turn the ignition switch to ON.
3. Use a pen or pencil to press and hold down the green programming button on the side of the control unit until the interior lights come on. They will come on for 5 seconds. (Steps 3 and 4 must be done within 5 seconds of each other.)

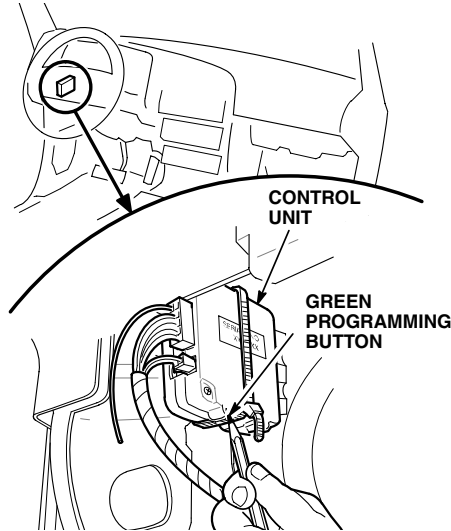

4. Press and release the top button on the transmitter. Verify that the LED goes out, the siren chirps once, and the front sidemarker lights flash to confirm that the transmitter's code was accepted by the control unit.
5. If you have another transmitter to program, repeat steps 3 and 4.


## Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

## Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

## 1998–99 SLX with factory-installed security system

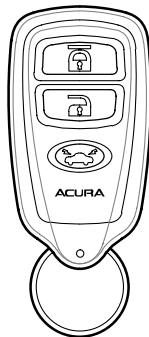

P/N 8-97149-392-0

## Programming a Transmitter

To program the transmitters, use one of these two procedures:

- Procedure One cancels all learned transmitter codes and adds one new transmitter. None of the previously programmed transmitters will work. Use this programming procedure only if all transmitters were lost or stolen, or if a new control unit has been installed.
- Procedure Two adds additional transmitters without cancelling any of the previously learned codes. The system accepts up to four transmitters.

**Procedure One** (cancels all codes, adds one new transmitter)

1. Open the driver's door.
2. Turn the ignition switch to the ACC position and then to the LOCK position three times. (This step must be completed within 10 seconds, or the system will not enter the programming mode.)
3. Within 10 seconds, close and open the door two times.
4. Turn the ignition switch to the ACC position and then to the LOCK position **five** times. Close and open the door. (Complete this process within 10 seconds.) Verify that the power door locks cycle once to confirm that the system is in programming mode.
5. Within 20 seconds, press the "Lock" button on the transmitter you are programming. Verify that the door locks cycle once.
6. Within 20 seconds, press the "Unlock" button on the transmitter. Verify that the door locks cycle once to confirm that the system has accepted the transmitter's code.

**Procedure Two** (adds transmitters)

1. Open the driver's door.
2. Turn the ignition switch to the ACC position and then to the LOCK position three times. (This step must be completed within 10 seconds, or the system will not enter the programming mode.)
3. Within 10 seconds, close and open the door two times.
4. Turn the ignition switch to the ACC position and then to the LOCK position **three** times. Close and open the door. (Complete this process within 10 seconds.) Verify that the power door locks cycle once to confirm that the system is in programming mode.
5. Within 20 seconds, press the "Lock" button on the transmitter you are programming. Verify that the door locks cycle once.
6. Within 20 seconds, press the "Unlock" button on the transmitter. Verify that the door locks cycle once to confirm that the system has accepted the transmitter's code.

## Turning the Audible Chirp On/Off

1. Open the driver's door, then insert the key in the driver's door lock.
2. Turn the key to the "Lock" position, then to the "Unlock" position. Repeat this two more times. (Complete this procedure within 10 seconds.)
3. Within 10 seconds, close and open the door two times.
4. Within 10 seconds, turn the key to the "Lock" position, and then to the "Unlock" position, three times. Close and open the door once. Verify that the power door locks cycle once to confirm that the chirp has been turned on/off.

## Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

## Batteries for the Transmitter


The battery number is CR2016. Each transmitter uses two batteries.

---

## 2001–04 MDX with factory-installed security system

Without Touring Package  
P/N 72147-S3V-A01

With Touring Package  
P/N 72147-S3V-A12 (Memory 1)  
P/N 72147-S3V-A22 (Memory 2)

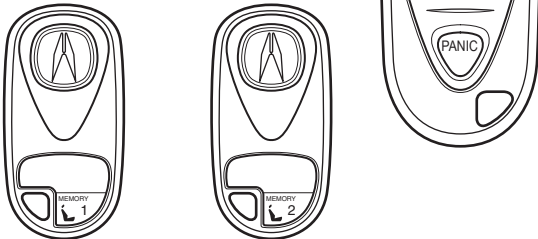

The transmitters with the Touring package are integrated into the Driver's Position Memory System. When the doors are unlocked with the remote transmitter, Memory 1 or Memory 2 in the DPMS is activated, depending on the transmitter used. When the driver's door is opened, the seat and mirrors move to the positions stored in the activated memory.

## Programming the Transmitter

### NOTES:

- The system accepts up to three transmitters. The transmitter codes are stored in a stacking-type memory. If a fourth transmitter code is programmed, the code for the first transmitter will be erased.
  - Entering the programming mode cancels all learned transmitter codes, so none of the previously programmed transmitters will work. You must reprogram all of the transmitters once you are in the programming mode.
  - You must complete steps 1-6 within 4 seconds of the previous step to keep the system from exiting the programming mode.
1. Turn the ignition switch to ON (II).
  2. Press the "Lock" or "Unlock" button on one of the transmitters. (An unprogrammed transmitter can be used for this step.)
  3. Turn the ignition switch to LOCK (0).
  4. Repeat steps 1, 2, and 3 two more times. Use the same transmitter used in step 2.
  5. Turn the ignition switch to ON (II).
  6. Press the "Lock" or "Unlock" button on the same transmitter. Make sure the power door locks cycle to confirm that the system is in programming mode.
  7. Within 10 seconds, press the "Lock" or "Unlock" button on each transmitter, including the one used to enter the programming mode. Make sure the power door locks cycle after you press each transmitter button to confirm that the system accepted the transmitter's code.
  8. Turn the ignition switch to LOCK (0) to exit the programming mode.

## Linking and Unlinking the Remote Transmitter

To link and unlink the remote transmitter from the DPMS, press and hold the "Unlock" and "Lock" buttons at the same time for about 1 second. The LED on the transmitter blinks once to indicate linked or twice to indicate unlinked.

## Ordering a Transmitter

Transmitters can be ordered only by authorized Acura dealers. Order them from American Honda using normal parts ordering procedures.

## Batteries for the Transmitter

The battery number is CR2025. Each transmitter uses one battery.

---

## Remote Transmitter Quick Reference Guide

<b>Model</b>	<b>Application</b>	<b>Remote Transmitter</b>	<b>Battery</b>
<b>Integra</b>	1990–93 with dealer-installed security system	P/N 08E50-SK7-210	CR2025 (one required)
	1994–96 with dealer-installed security system	P/N 08E51-ST7-20101	CR2025 (one required)
	1997–01 with dealer-installed security system	P/N 08E51-ST7-2M2G1	CR2025 (one required)
<b>Vigor</b>	1992–94 with factory-installed keyless entry	Order from Kenwood USA	CR1220 (two required)
<b>RSX</b>	2002–04 with factory-installed security system	P/N 72147-S6M-A01	CR2025 (one required)
<b>TSX</b>	2004 with factory-installed security system	P/N 72147-SEC-A01	CR2025 (one required)
<b>2.2/2.3CL</b>	1997–99 with factory-installed security system	P/N 72147-SY8-A01	CR2025 (one required)

<b>Model</b>	<b>Application</b>	<b>Remote Transmitter</b>	<b>Battery</b>
<b>3.0/3.2CL</b>	1997–99 with factory-installed security system	P/N 72147-SY8-A01	CR2025 (one required)
	2001 with factory-installed security system	P/N 72147-S3M-A11 (Memory 1) P/N 72147-S3M-A21 (Memory 2)	CR2025 (one required)
	2002–03 with factory-installed security system	P/N 72147-S0K-A12 (Memory 1) P/N 72147-S0K-A22 (Memory 2)	CR2025 (one required)
<b>2.5TL</b>	1996–97 with dealer-installed keyless entry system	Order from Kenwood USA	CR1220 (two required)
	1998 with factory-installed keyless entry system	P/N 72147-SZ5-A01	CR2016 (two required)
<b>3.2TL</b>	1996–98 with factory-installed keyless entry system	P/N 72147-SZ5-A01	CR2016 (two required)
	1999 with factory-installed security system	P/N 72147-S0K-A01	CR2025 (one required)
	2000–01 with factory-installed security system	P/N 72147-S0K-A02	CR2025 (one required)
	2002–03 with factory-installed security system	P/N 72147-S0K-A12 (Memory 1) P/N 72147-S0K-A22 (Memory 2)	CR2025 (one required)

<b>Model</b>	<b>Application</b>	<b>Remote Transmitter</b>	<b>Battery</b>
<b>TL</b>	2004 with factory-installed security system	P/N 72147-SEP-A52 (Driver 1)  P/N 72147-SEP-A62 (Driver 2)	CR2025 (one required)
<b>Legend</b>	1991–95 with dealer-installed keyless entry system	Order from Kenwood USA	CR1220 (two required)
<b>3.5RL</b>	1996–01 with factory-installed security system	P/N 72147-SZ3-A02	CR2025 (one required)
	2002–04 with factory-installed security system	P/N 72147-SZ3-A91	CR2025 (one required)
<b>NSX</b>	1991–03 with dealer-installed keyless entry system	Order from Kenwood USA	CR1220 (two required)
	2004 with factory-installed security system	P/N 72147-SL0-A01	CR2025 (one required)
<b>SLX</b>	1996–97 with dealer-installed security system or factory-installed security system	P/N 2-91101-691-0	CR2025 (one required)
	1998–99 with factory-installed security system	P/N 8-97149-392-0	CR2016 (two required)
<b>MDX</b>	2001–04 with factory-installed security system	Without Touring package: P/N 72147-S3V-A01  With Touring Package: P/N 72147-S3V-A12 (Memory 1) P/N 72147-S3V-A22 (Memory 2)	CR2025 (one required)