

## OBD2A OBD2B CONVERSION HARNESS

Connector A			Connector C			Connector D			
OBD2A/OBD2B/DESCRIPTION	A	B	DESC	A	B	DESC	A	B	DESC
1	B5	INJ4	1	C22	CKF P	1	C27	TPS	
2	B4	INJ3	2	C8	CKP P	2	C26	ECT	
3	B2	INJ2	3	C20	TDC P	3	C17	MAP	
4	B11	INJ1	4	C29	CYP P	4	C19	VCC1	
5	A8	So2SHTC	5	A27	ACS	5	A32	BKSW	
6	C1	Po2SHTC	6	A24	STS	6	C3	KS	
7	B7	ESOL	7	A10	SCS	7	C16	PHo2S	
8	B12	VTS	8	A21	KLINE	8	C25	IAT	
9	B20	LG1	9		empty	9	C6	EGRL	
10	B2	PG1	10	B21	VBU	10	C28	VCC2	
11	B1	IGP1	11	C31	CKF M	11	C18	SG2	
12	B23	IACV	12	C9	CKP M	12	C7	SG1	
13	B15	IACVN	13	C21	TDC M	13		empty	
14		empty	14	C30	CYP M	14	A23	SHo2S	
15	A6	PCS	15	C10	VTM	15	A29	PTANK	
16	A16	FLR	16	A26	PSPSW	16	A30	EL	
17	A17	ACC	17	C5	ALTF				
18	A18	MIL	18	C23	VSS				
19	C2	ALTC	19		empty				
20	B13	ICM	20		empty				
21		empty	21		empty				
22	B22	LG2	22	A25	IMOCODE				
23	B10	PG2	23		empty				
24	B9	IGP2	24		empty				
25		empty	25		empty				
26	C16	IAB	26		empty				
27	A27	FANC	27		empty				
28	A3	2WBS	28		empty				
29	A4	VSV	29	A9	ATPNP				
30		empty	30		empty				
31		empty	31		empty				
32		empty							