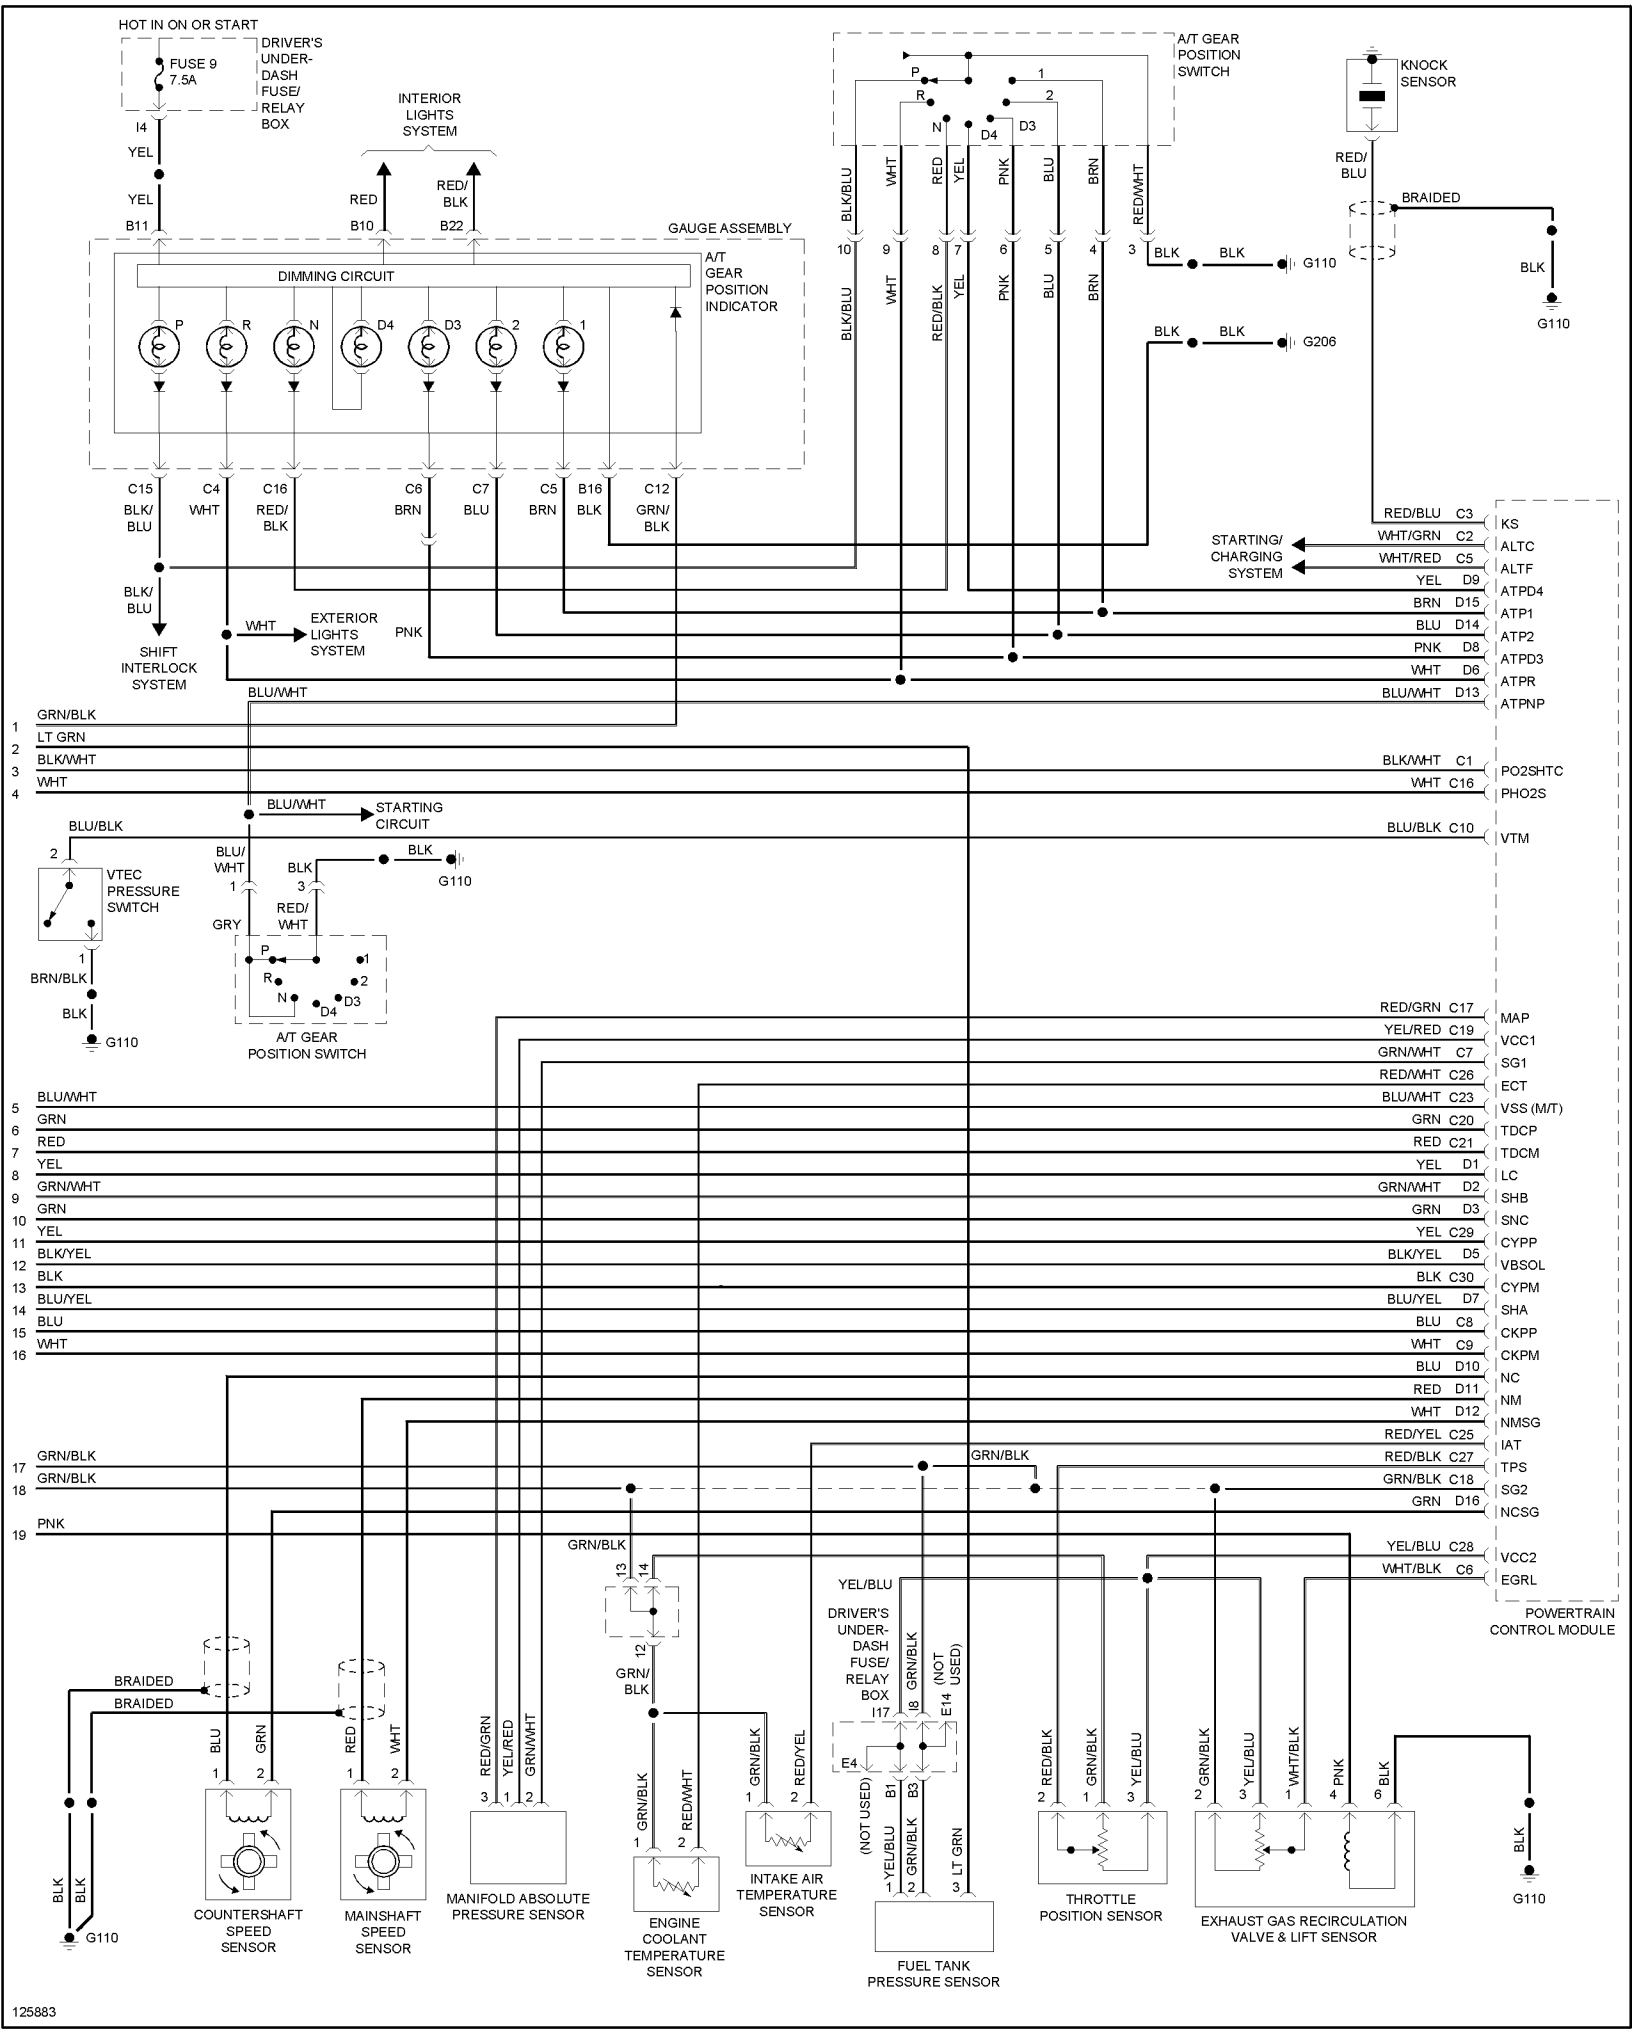
HOT IN ON OR START
FUSE 9
7.5A
DRIVER'S UNDER-DASH FUSE/ RELAY BOX
I4
YEL
B11
INTERIOR LIGHTS SYSTEM
RED
B10
RED/ BLK
B22
GAUGE ASSEMBLY
DIMMING CIRCUIT
A/T GEAR POSITION INDICATOR
P
R
N
D4
D3
2
1
A/T GEAR POSITION SWITCH
BLK/WHT
BLU/BLK
YEL
WHT
RED
PNK
BLU
BRN
RED/WHT
BLK
G110
G206
KNOCK SENSOR
RED/ BLU
BRAIDED
C15 BLK/ BLU
C4 WHT
C16 RED/ BLK
C6 BRN
C7 BLU
C5 BRN
B16 BLK
C12 GRN/ BLK
SHIFT INTERLOCK SYSTEM
EXTERIOR LIGHTS SYSTEM
STARTING CIRCUIT
STARTING/ CHARGING SYSTEM
RED/BLU C3 KS
WHT/GRN C2 ALTC
WHT/RED C5 ALTF
YEL D9 ATPD4
BRN D15 ATP1
BLU D14 ATP2
PNK D8 ATPD3
WHT D6 ATPR
BLU/WHT D13 ATPNP
GRN/BLK
LT GRN
BLK/WHT C1 PO2SHTC
WHT C16 PHO2S
BLU/BLK C10 VTM
VTEC PRESSURE SWITCH
BRN/BLK
GRY
RED/GRN C17 MAP
YEL/RED C19 VCC1
GRN/WHT C7 SG1
RED/WHT C26 ECT
BLU/WHT C23 VSS (M/T)
GRN C20 TDCP
RED C21 TDCM
YEL D1 LC
GRN/WHT D2 SHB
GRN D3 SNC
YEL C29 CYPP
BLK/YEL D5 VBSOL
BLK C30 CYPM
BLU/YEL D7 SHA
BLU C8 CKPP
WHT C9 CKPM
BLU D10 NC
RED D11 NM
WHT D12 NMSG
RED/YEL C25 IAT
RED/BLK C27 TPS
GRN/BLK C18 SG2
GRN D16 NCSG
YEL/BLU C28 VCC2
WHT/BLK C6 EGRL
POWERTRAIN CONTROL MODULE
DRIVER'S UNDER-DASH FUSE/ RELAY BOX I17
(NOT USED)
COUNTERSHAFT SPEED SENSOR
MAINSHAFT SPEED SENSOR
MANIFOLD ABSOLUTE PRESSURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
INTAKE AIR TEMPERATURE SENSOR
FUEL TANK PRESSURE SENSOR
THROTTLE POSITION SENSOR
EXHAUST GAS RECIRCULATION VALVE & LIFT SENSOR
125883